

**MIDI Solutions**

**Footswitch Controller**

**OPERATING INSTRUCTIONS**

MIDI Solutions Footswitch Controller Operating Instructions M404-100

© 2023 MIDI Solutions Inc. All rights reserved.


MIDI Solutions Inc.  
PO Box 3010  
Vancouver, BC Canada  
V6B 3X5

[www.midisolutions.com](http://www.midisolutions.com)

## INTRODUCTION

Thank you for purchasing the MIDI Solutions Footswitch Controller.

The MIDI Solutions Footswitch Controller can be programmed to generate a variety of MIDI messages in response to a contact closure between the tip and sleeve of its 1/4" phone jack input. It is also possible to program the Footswitch Controller to perform a variety of other functions, such as Rechannelize, Transpose, and Tap Tempo. All programmed settings are retained even after power is removed from the unit. The MIDI Solutions Footswitch Controller is MIDI-powered and requires no batteries or power supply to operate.

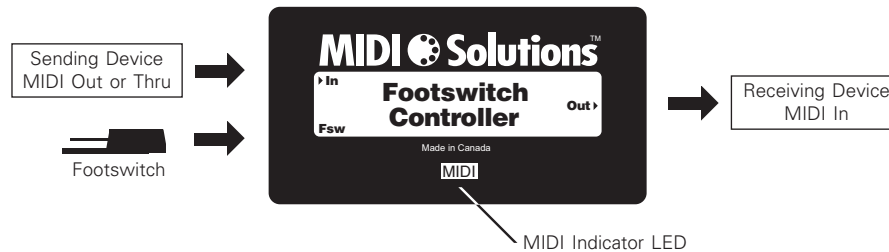

## CONNECTIONS

To program the Footswitch Controller connect the MIDI Out from your MIDI interface to the MIDI In of the Footswitch Controller. The MIDI Out and footswitch input can be left disconnected during programming.

Once the Footswitch Controller has been programmed it can be inserted wherever it is required in your MIDI setup. Connect the footswitch (or any contact closure from tip to sleeve of a 1/4" phone plug) to the Footswitch Controller's footswitch input (**Fsw**). Connect the MIDI Out or Thru of the sending device to the MIDI In of the Footswitch Controller. The Footswitch Controller draws power from the device that is connected to its MIDI input, so even if the Footswitch Controller does not need to receive MIDI messages from this device the connection is still required in order for the Footswitch Controller to draw power (the Footswitch Controller's Echo parameter can be programmed to OFF to prevent any unwanted incoming MIDI messages from being echoed to the Footswitch Controller's MIDI Out). Connect the MIDI Out of the Footswitch Controller to the MIDI In of the receiving MIDI device. It is recommended that the number of MIDI Solutions products powered by a single MIDI Out or Thru be limited to four.

## PROGRAMMING

The Footswitch Controller is programmed by sending it MIDI System Exclusive programming commands from a computer with a MIDI interface. These commands are described in detail on the following pages, however **the Programming Tools software creates these commands automatically** (see [www.midisolutions.com/support.htm](http://www.midisolutions.com/support.htm)).

Upon receipt of a programming command, the Footswitch Controller's MIDI indicator LED flashes rapidly for about one second to indicate that the setting has been stored. Settings are retained after power is removed, and the unit can then be inserted wherever it is required in your MIDI setup.

## OPERATION

Ensure that the footswitch is connected to the Footswitch Controller before it is powered up as its polarity is stored at this time (if auto-polarity is selected). The Footswitch Controller's MIDI Indicator LED will light as soon as the sending device is turned on, and flashes whenever MIDI data passes through the unit. Depressing the footswitch causes the Footswitch Controller to perform its programmed function.

## PROGRAMMING COMMANDS

### CLEAR SETTINGS AND SET DEVICE PARAMETERS

The following Device Parameters are in effect regardless of the functions that the Footswitch Controller has been programmed to perform.

**Echo:** When Echo is ON, all incoming MIDI messages received by the Footswitch Controller are echoed to its MIDI output. When Echo is OFF, only the messages generated by the Footswitch Controller are sent to its MIDI output.

**Toggle:** When the Toggle parameter is OFF, the Footswitch Controller performs the *depress operation* when it is *depressed*, and the *release operation* when it is *released*. When Toggle is ON, the Footswitch Controller toggles between the *depress operation* and the *release operation* each time the footswitch is depressed (nothing is done on release of the footswitch).

**Footswitch Polarity:** When Polarity is set to OPEN, closing the contact initiates the depress operation, and opening the contact initiates the release operation. When Polarity is set to CLOSED, opening the contact initiates the depress operation, and closing the contact initiates the release operation. When Polarity is set to AUTO, the Footswitch Controller determines the polarity of the footswitch based on its power-up state.

**Send State on Power-up:** The Footswitch Controller can be programmed to send the state of the footswitch input on power-up.

**Wait for Next Bar:** The Footswitch Controller can be programmed to wait until the beginning of the next bar to perform the footswitch action.

**Debounce Time:** The Debounce Time specifies the length of time after a footswitch changes state before a new change of state is allowed to occur.

To clear the Footswitch Controller's settings and set the device parameters, send it the following System Exclusive programming commands:

- ▶ **F0 00 00 50 04 00 aa bb (cc) (dd) (ee) F7** (cc, dd, and ee are optional)

**aa** = 00: Echo OFF    **aa** = 01: Echo ON

**bb** = 00: Toggle OFF    **bb** = 01: Toggle ON

**cc** = 00: Normally OPEN Polarity    **cc** = 01: Normally CLOSED Polarity    **cc** omitted: Auto Polarity

**dd** is optional, If **dd** = 11 the Footswitch Controller will send the state of the footswitch on power-up.

**ee** is optional. If **ee** = 7F, the Footswitch Controller waits for the beginning of the next bar to perform the footswitch action

- ▶ **F0 00 00 50 04 00 03 (00) tt F7** (00 is optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**tt** = Debounce time in ms

**00** is optional, if included the above debounce time **tt** is doubled

### Examples

To program the Footswitch Controller to echo incoming MIDI messages to the MIDI output, set the toggle parameter to OFF, force the polarity to NORMALLY OPEN, and send nothing on power-up, send it the following System Exclusive programming command:

F0 00 00 50 04 00 01 00 00 F7

To program the footswitch debounce time to 100 ms send the Footswitch Controller the following System Exclusive programming command:

F0 00 00 50 04 00 03 64 F7

## FOOTSWITCH CONTROLLER FUNCTIONS

The Footswitch Controller can be programmed with one of the functions on the following pages.

### NOTE-ON

To program the Footswitch Controller to send out up to eight Note-On messages when the footswitch is depressed, send it the following System Exclusive programming command:

- **F0 00 00 50 04 aa (tt) nn vv cc (nn vv) F7** (tt and nn vv are optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**aa** specifies mode of transmission as follows:

- 01: Send Note-On(s) on depression of footswitch, Note-Off(s) on release
- 11: Send Note-On(s) on depression of footswitch, nothing on release
- 21: Send Note-On(s) on depression of footswitch, Note-Off(s) after the duration specified by **tt** (see below)
- 31: Send Note-On(s) on depression of footswitch, Note-Off(s) when the footswitch is released after the minimum duration **tt** (see below)
- 41: Send Note-On(s) on depression of footswitch, Note-Off(s) when the footswitch is released up to the maximum duration **tt** (see below)
- 51: Cycle through each Note-On on depression of footswitch, send the corresponding Note-Off on release
- 61: Cycle through each Note-On on depression of footswitch, send nothing on release

**tt** = Duration in 8 ms increments, or 1 s increments if preceded by 00. (**tt** is only included if **aa** = 21, 31, or 41)

**nn** = Note number

**vv** = Note-On velocity

**cc** = MIDI channel (see MIDI channel table at end)

**nn vv** = Additional notes and velocities (up to eight notes total)

### Example

To program the Footswitch Controller to send out a middle C of velocity of 64 on MIDI channel 5 when the footswitch is depressed, and send the corresponding Note-Off after 7 seconds, set **aa = 21** (Send Note-On on depression of footswitch, Note-Off after the duration specified by **tt**), **tt = 00 07** (insert 00 prior to 07 to specify 1s increments), **nn = 3C** (middle C is Note number 60, 3C is the hexadecimal value for 60), **vv = 40** (40 is the hexadecimal value for 64), and **cc = 04** (04 specifies MIDI channel 5). These values result in the following System Exclusive programming command:

**F0 00 00 50 04 21 00 07 3C 40 04 F7**

## CONTROL CHANGE

To program the Footswitch Controller to send out up to eight Control Change (CC) messages when the footswitch is depressed, send it the following System Exclusive programming command:

- ▶ **F0 00 00 50 04 aa (tt) nn vv cc (nn vv) F7** (tt and nn vv are optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**aa** specifies mode of transmission as follows:

- 02: Send CC(s) on depression of footswitch, CC(s) of value 0 on release
- 12: Send CC(s) on depression of footswitch, nothing on release
- 22: Send CC(s) on depression of footswitch, CC(s) of value 0 after the duration specified by **tt** (see below)
- 32: Send CC(s) on depression of footswitch, CC(s) of value 0 when the footswitch is released after the minimum duration **tt** (see below)
- 42: Send CC(s) on depression of footswitch, CC(s) of value 0 when the footswitch is released up to the maximum duration **tt** (see below)
- 52: Cycle through each CC on depression of footswitch, send the corresponding CC of value 0 on release
- 62: Cycle through each CC on depression of footswitch, send nothing on release

**tt** = Duration in 8 ms increments, or 1 s increments if preceded by 00. (**tt** is only included if **aa** = 22, 32, or 42)

**nn** = Control Change number

**vv** = Control Change value (sent on depression of footswitch)

**cc** = MIDI channel (see MIDI channel table at end)

**nn vv** = Additional CC numbers and values (up to eight CCs total)

### Example

To program the Footswitch Controller to send maximum volume on all MIDI channels when the footswitch is depressed, set **aa** = **12** (Send CC on depression of footswitch, nothing on release), **nn** = **07** (volume is CC#7), **vv** = **7F** (7F is the hexadecimal value for 127, the maximum value), and **cc** = **7F** (7F specifies all MIDI channels). These values result in the following System Exclusive programming command:

F0 00 00 50 04 12 07 7F 7F F7

## START/STOP

To program the Footswitch Controller to send MIDI Start and Stop messages, send it the following System Exclusive programming command:

- ▶ **F0 00 00 50 04 05 (ss) F7** (**ss** is optional)

**ss** specifies the mode of transmission as follows:

- 00: Send Stop on depression of footswitch, nothing on release
- 01: Send Start on depression of footswitch, nothing on release
- ss** omitted: Send Start on depression of footswitch, Stop on release

Note that the Footswitch Controller can be programmed to toggle between Start and Stop each time the footswitch is depressed by setting the Footswitch Toggle parameter to Toggle ON (see Device Parameters).

## PITCH BEND

To program the Footswitch Controller to send out a Pitch Bend message when the footswitch is depressed, send it the following System Exclusive programming command:

► **F0 00 00 50 04 aa ll mm cc F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**aa** specifies the mode of transmission as follows:

03: Send **ll mm** value on depression of footswitch, reset pitch to zero on release

13: Send **ll mm** value on depression of footswitch, nothing on release

**ll** = LSB pitch value

**mm** = MSB pitch value

**cc** = MIDI channel (see MIDI channel table at end)

### Example

To program the Footswitch Controller to send out a pitch bend message of +1 semitone (to a device that is set to a full octave pitch bend range) on channel 12 when the footswitch is depressed, set **aa = 03** (send value on depression, reset pitch to zero on release), **ll mm = 2B 45** (2B 45 is the value for +1 semitone bend in a full octave range), and **cc = 0B** (0B specifies MIDI channel 12). These values result in the following System Exclusive programming command:

F0 00 00 50 04 03 2B 45 0B F7

## PROGRAM CHANGE

To program the Footswitch Controller to send out a Program Change message when the footswitch is depressed, send it the following System Exclusive programming command:

► **F0 00 00 50 04 04 pp cc (qq) (bb bb) (dd dd) F7** (**qq**, **bb bb**, and **dd dd** are optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**pp** = Program number sent on depression of footswitch

**cc** = MIDI channel (see MIDI channel table at end)

**qq** is optional, specifies Program number sent on release of footswitch

**bb bb** is optional, specifies Bank Select MSB and LSB values to precede **pp** on depression of footswitch

**dd dd** is optional, specifies Bank Select MSB and LSB values to precede **qq** on release of footswitch

### Example

To program the Footswitch Controller to send out Bank Select MSB 3 + Bank Select LSB 6 + Program Change 0 on all MIDI channels when the footswitch is depressed, and nothing when the footswitch is released, set **pp = 00** (Program Change 0), **cc = 7F** (7F specifies all MIDI channels), **omit qq** (nothing sent on release), **bb bb = 03 06** (Bank Select MSB = 3, Bank Select LSB = 6), and **omit dd dd** (nothing sent on release). This results in the following System Exclusive programming command:

F0 00 00 50 04 04 00 7F 03 06 F7

## PROGRAM CHANGE CAPTURE

To program the Footswitch Controller to capture the Program Change and Bank Select messages it receives while the footswitch is depressed, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0D F7**

Once the Program Change and Bank Select data has been captured, tapping the footswitch causes the Footswitch Controller to resend the captured data. Captured data is retained even after power is removed from the Footswitch Controller.

## PROGRAM CHANGE INC/DEC

A single Footswitch Controller may be programmed to provide a Program Change INC function, or two Footswitch Controllers may be chained together to provide a Program Change INC/DEC function, with one unit programmed as an increment unit and the other as a decrement unit. **The MIDI Out of the decrement unit must be connected to the MIDI In of the increment unit.** To program the units send them the following programming commands:

► **INC unit: F0 00 00 50 04 07 01 cc (xx yy) F7** (xx yy is optional)

► **DEC unit: F0 00 00 50 04 07 00 cc (xx yy) F7** (xx yy is optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**cc** = MIDI channel (see MIDI channel table at end)

**xx yy** is optional. **xx** = minimum value, **yy** = maximum value

### Example

To program a Footswitch Controller with the Program Change INC function on MIDI channel 16, and a second Footswitch Controller with the Program Change DEC function on MIDI channel 16, send them the following System Exclusive programming commands:

INC unit: F0 00 00 50 04 07 01 **0F** F7

DEC unit: F0 00 00 50 04 07 00 **0F** F7

## PROGRAM CHANGE ENTER AND SELECT

To program the Footswitch Controller to allow a keyboard to be used as a numeric keypad to enter program numbers, or notes from a keyboard to select specific programs numbers, send the Footswitch Controller the following System Exclusive programming command:

► **F0 00 00 50 04 14 mm cc F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**mm** specifies the mode of operation as follows:

00: Keyboard is used as a numeric keypad to enter the program number (0 - 127) while footswitch is depressed, with middle C representing "0", to A above middle C representing "9"

>0: Keyboard is used to select a specific program number (0 - 127) while footswitch is depressed, starting from note **mm** for program #0. Pressing the note twice adds 64 to the program value.

(the Program Change message is sent on release of the footswitch)

**cc** = MIDI channel (see MIDI channel table at end)



## SYSTEM EXCLUSIVE

To program the Footswitch Controller to send out a System Exclusive message when the footswitch is depressed, send it the following System Exclusive Programming commands:

- ▶ **F0 00 00 50 04 06 01 F7** followed by **F0 ... F7**

where **F0 ... F7** is the System Exclusive message the Footswitch Controller is being programmed to send  
**(max. 20 bytes)**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

To program the Footswitch Controller to send out a System Exclusive message when the footswitch is released, send it the following System Exclusive Programming commands:

- ▶ **F0 00 00 50 04 06 00 F7** followed by **F0 ... F7**

where **F0 ... F7** is the System Exclusive message the Footswitch Controller is being programmed to send  
**(max. 20 bytes)**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

## Example

To program the Footswitch Controller to send out the MIDI Machine Control *Play* command (F0 7F 7F 06 02 F7) when the footswitch is depressed, and the MIDI Machine Control *Stop* command (F0 7F 7F 06 01 F7) when the footswitch is released, send the Footswitch Controller the following System Exclusive Programming commands:

F0 00 00 50 04 06 01 F7 followed by **F0 7F 7F 06 02 F7**

F0 00 00 50 04 06 00 F7 followed by **F0 7F 7F 06 01 F7**

## NOTE-ON FILTER

To program the Footswitch Controller to filter Note-On messages on a selected MIDI channel when the footswitch is depressed, send it the following System Exclusive programming command:

- ▶ **F0 00 00 50 04 0C cc aa F7**

**cc** = MIDI channel (see MIDI channel table at end)

**aa = 01**: Send All-Notes-Off on depression of footswitch, **aa = 00**: do not send All-Notes-Off on depression

To start filtering Note-On messages depress the footswitch (the All-Notes-Off message is sent out at this time), to stop filtering release the footswitch.

## RECHANNELIZE

To program the Footswitch Controller to rechannelize an incoming MIDI channel to a selected outgoing MIDI channel when the footswitch is depressed, send it the following System Exclusive Programming command:

- ▶ **F0 00 00 50 04 09 (10) cc (pp) (00) F7** (10, pp, and 00 are optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**10** is optional, if included then the 16 notes from middle C up are used to select the channel. If omitted, then the number of notes played while the footswitch is depressed is used to select the channel.

**cc** = Incoming MIDI channel to rechannelize (see MIDI channel table at end)

**pp** is optional, specifies preset outgoing MIDI channel (see MIDI channel table at end)

**00** is optional, if included then incoming notes are ignored while footswitch is depressed

To rechannelize an incoming MIDI channel depress the footswitch (the All-Notes-Off message is sent out at this time), select the channel by playing notes on the keyboard (these notes are not echoed to MIDI Out), and release the footswitch. If no notes are received by the Footswitch Controller during this period, the outgoing MIDI channel is set to the preset **pp**. To program the Footswitch Controller to ignore incoming notes and change directly to the preset MIDI channel **pp** when the footswitch is depressed, insert **00** in the above command as shown.

### Example Setting

To program the Footswitch Controller to accept rechannelize selection for incoming MIDI channel 1 when the footswitch is depressed, send it the following System Exclusive programming command:

```
F0 00 00 50 04 09 00 F7
```

### Example Operation with Above Setting

To rechannelize from MIDI channel 1 to MIDI channel 2 depress the footswitch, play any two notes, and release the footswitch. All MIDI channel 1 messages will now be rechannelized to MIDI channel 2. Continuing to tap the footswitch will cause the Footswitch Controller to toggle between the original and selected channels.

## TRANSPOSE

To program the Footswitch Controller to transpose incoming note messages by a selected interval by depressing the footswitch, send it the following System Exclusive Programming command:

- ▶ **F0 00 00 50 04 0A cc (pp) (00) F7** (pp and 00 are optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**cc** = Incoming MIDI channel to transpose (see MIDI channel table at end)

**pp** is optional, specifies preset transpose interval (40 = zero transpose)

**00** is optional, if included then incoming notes are ignored while footswitch is depressed

To specify a transpose interval depress the footswitch (the All-Notes-Off message is sent out at this time), play the note above or below middle C corresponding to the transpose interval (this note is not echoed to MIDI Out), and release the footswitch. If no notes are received by the Footswitch Controller during this period, the transpose interval is set to the preset transpose interval **pp**. To program the Footswitch Controller to ignore incoming notes and change directly to the preset transpose interval **pp** when the footswitch is depressed, insert a **00** after the **pp** in the above programming command.

## TAP TEMPO

To program the Footswitch Controller to operate in Tap Tempo mode sending MIDI timing clocks at a tempo corresponding to the taps of the footswitch, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0B F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

To program the Footswitch Controller to operate in Tap Tempo mode and also send a Note or Control Change message along with each tap of the footswitch, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0B aa nn vv cc (00) F7** (00 is optional)

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**aa** = 01 to send Note, 02 to send Control Change

**nn** = Note number if **aa** = 01, Control Change number if **aa** = 02

**vv** = Note velocity if **aa** = 01, Control Change value if **aa** = 02

**cc** = MIDI channel of outgoing Note or Control Change message (see MIDI channel table at end)

**00** is optional. If inserted, nothing is sent on release of the footswitch. If not inserted then a Note-Off (if **aa** = 01) or Control Change of value zero (if **aa** = 02) is sent on release of the footswitch.

To program the Footswitch Controller to operate in Tap Tempo mode and also respond to a Note or Control Change message (of value>0) as a tap, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0B aa nn cc F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**aa** = 11 for Note, 12 for Control Change

**nn** = Note number if **aa** = 11, Control Change number if **aa** = 12

**cc** = MIDI channel of incoming Note or Control Change message (see MIDI channel table at end)

To program the Footswitch Controller to operate in Tap Tempo mode and also to respond to a Note to specify the exact tempo in bpm, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0B 21 bb cc F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**bb** = offset added to Note number to obtain tempo

**cc** = MIDI channel of incoming Note message (see MIDI channel table at end)

To program the Footswitch Controller to operate in Tap Tempo mode and also to respond to a Control Change message to specify the exact tempo in bpm, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0B 22 nn bb cc F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

**nn** = Control Change number

**bb** = offset added to Control Change value to obtain tempo

**cc** = MIDI channel of incoming Control Change message (see MIDI channel table at end)

## **SONG SELECT**

To program the Footswitch Controller to send out a Song Select message when the footswitch is depressed, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0E ss (tt) F7 (all values in Hexadecimal)**

**ss** = Song Select sent on depression of footswitch

**tt** is optional, specifies Song Select sent on release of footswitch

### **Example**

To program the Footswitch Controller to send out Song Select #5 when the footswitch is depressed, send it the following System Exclusive programming command:

F0 00 00 50 04 0E 04 F7

## **SONG SELECT INC**

To program the Footswitch Controller to increment Song Select messages when the footswitch is depressed, send it the following System Exclusive programming command:

► **F0 00 00 50 04 0F 01 (xx yy) F7 (all values in Hex)**

**xx yy** is optional. **xx** = minimum value, **yy** = maximum value

### **Example**

To program the Footswitch Controller to increment through Song Select numbers 0 - 10 in response to depression of the footswitch, send it the following System Exclusive programming command:

F0 00 00 50 04 0F 01 00 0A F7

## **SIMULATE FOOTSWITCH CLOSURE**

To cause the Footswitch Controller to simulate the action of the footswitch without physically depressing or releasing the footswitch, send it the following following System Exclusive message:

► **F0 00 00 50 04 10 aa F7 (all values in Hexadecimal)**

**aa** = 00: Simulate RELEASE, **aa** = 01: Simulate DEPRESSION

### **Example**

To cause the Footswitch Controller to simulate a footswitch depression, send it the following System Exclusive message:

F0 00 00 50 04 10 01 F7

## MIDI CHANNEL TABLE

The value **cc** in the programming commands is assigned according to the following table:

MIDI Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ALL
cc	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F	7F

## MIDI CONTROL CHANGE TABLE

Decimal	Hexadecimal	Control Function
0	00	Bank Select
1	01	Modulation wheel or lever
2	02	Breath Controller
3	03	Undefined
4	04	Foot controller
5	05	Portamento time
6	06	Data entry MSB
7	07	Channel Volume
8	08	Balance
9	09	Undefined
10	0A	Pan
11	0B	Expression Controller
12-13	0C-0D	Effect Controls 1-2
14-15	0E-0F	Undefined
16-19	10-13	General Purpose Controllers (#'s 1-4)
20-31	14-1F	Undefined
32-63	20-3F	LSB values for 0-31
64	40	Damper pedal (sustain)
65	41	Portamento On/Off
66	42	Sostenuto
67	43	Soft pedal
68	44	Legato Fsw (vv=00-3F: Normal, 40-7F: Legato)
69	45	Hold 2
70	46	Sound Controller 1 (default: Sound Variation)
71	47	Sound Controller 2 (default: Timbre/Harmonic Content)
72	48	Sound Controller 3 (default: Release Time)
73	49	Sound Controller 4 (default: Attack Time)
74	4A	Sound Controller 5 (default: Brightness)
75-79	4B-4F	Sound Controllers 6-10 (no defaults)
80-83	50-53	General Purpose Controllers (#'s 5-8)
84	54	Portamento Control
85-90	55-5A	Undefined
91	5B	Effects 1 Depth (formerly External Effects Depth)
92	5C	Effects 2 Depth (formerly Tremolo Depth)
93	5D	Effects 3 Depth (formerly Chorus Depth)
94	5E	Effects 4 Depth (formerly Celeste (Detune) Depth)
95	5F	Effects 5 Depth (formerly Phaser Depth)
96,97	60,61	Data increment, Data decrement
98,99	62,63	Non-Registered Parameter Number LSB, MSB
100,101	64,65	Registered Parameter Number LSB, MSB
102-119	66-77	Undefined
120-127	78-7F	Reserved for Channel Mode Messages

## HEXADECIMAL CONVERSION TABLE

Dec/Hex	16	10	32	20	48	30	64	40	80	50	96	60	112	70
0 00	16	10	32	20	48	30	64	40	80	50	96	60	112	70
1 01	17	11	33	21	49	31	65	41	81	51	97	61	113	71
2 02	18	12	34	22	50	32	66	42	82	52	98	62	114	72
3 03	19	13	35	23	51	33	67	43	83	53	99	63	115	73
4 04	20	14	36	24	52	34	68	44	84	54	100	64	116	74
5 05	21	15	37	25	53	35	69	45	85	55	101	65	117	75
6 06	22	16	38	26	54	36	70	46	86	56	102	66	118	76
7 07	23	17	39	27	55	37	71	47	87	57	103	67	119	77
8 08	24	18	40	28	56	38	72	48	88	58	104	68	120	78
9 09	25	19	41	29	57	39	73	49	89	59	105	69	121	79
10 0A	26	1A	42	2A	58	3A	74	4A	90	5A	106	6A	122	7A
11 0B	27	1B	43	2B	59	3B	75	4B	91	5B	107	6B	123	7B
12 0C	28	1C	44	2C	60	3C	76	4C	92	5C	108	6C	124	7C
13 0D	29	1D	45	2D	61	3D	77	4D	93	5D	109	6D	125	7D
14 0E	30	1E	46	2E	62	3E	78	4E	94	5E	110	6E	126	7E
15 0F	31	1F	47	2F	63	3F	79	4F	95	5F	111	6F	127	7F

## **WARRANTY**

MIDI Solutions Inc. warrants this product to be free from defects in material and workmanship for a period of one (1) year from date of purchase. This warranty is void if the product has been damaged by accident, misuse, alteration, unauthorized repairs or other causes not arising out of defects in material or workmanship. Under no circumstances will MIDI Solutions be liable for any loss of profits, benefits, time, interrupted operation, commercial loss, or consequential damages arising out of the use or inability to use the product. MIDI Solutions specifically disclaims any implied warranties of merchantability and fitness for a particular purpose. If the product requires service, a Return Merchandise Authorization (RMA) number must be obtained from MIDI Solutions and the product must be shipped prepaid to a specified Service Center. MIDI Solutions will repair or replace the product at our discretion and will pay return shipping fees. The customer is responsible for any damage or loss sustained during shipment in any direction.