

MIDI Solutions

Pedal Controller

OPERATING INSTRUCTIONS

MIDI Solutions Pedal Controller Operating Instructions M416-100

© 2016 MIDI Solutions Inc. All rights reserved.


MIDI Solutions Inc.
PO Box 3010
Vancouver, BC Canada
V6B 3X5

www.midisolutions.com

INTRODUCTION

Thank you for purchasing the MIDI Solutions Pedal Controller.

The MIDI Solutions Pedal Controller provides a 1/4" stereo phone jack input for connection to an expression pedal or potentiometer that can be used to control the value of a selected MIDI parameter in real time. The messages generated by the Pedal Controller can be merged with the messages received at its MIDI input. The MIDI Solutions Pedal Controller is MIDI-powered and requires no batteries or power supply to operate.

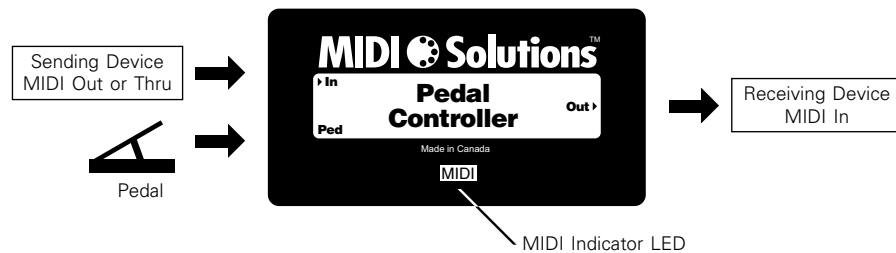

CONNECTIONS

To program the Pedal Controller connect the MIDI Out from your MIDI interface to the MIDI **In** of the Pedal Controller. The MIDI **Out** can be left disconnected during programming, but the pedal should be connected.

Once the Pedal Controller is programmed, it can be inserted wherever it is required in your MIDI setup. First connect the pedal to the pedal input of the Pedal Controller (**Ped**). Connect the MIDI Out or Thru of the sending device to the MIDI **In** of the Pedal Controller, and the MIDI **Out** of the Pedal Controller to the MIDI In of the receiving MIDI device. It is recommended that the number of MIDI Solutions products powered by a single MIDI Out or Thru be limited to four.

It is possible to connect a volume pedal to the Pedal Controller rather than an expression pedal, but a y-adaptor that breaks out the Pedal Controller's stereo jack to two mono jacks is required. Connect the input of the volume pedal to one of the mono jacks, and the output of the volume pedal to the other mono jack.

The only requirement when connecting a potentiometer to the Pedal Controller is that the wiper of the potentiometer must not be connected to the sleeve of the Ped input. The other terminals of the potentiometer can be connected to the either the tip, ring, or sleeve (one terminal to each). Optimal potentiometer values are 10k - 100k.

PROGRAMMING

The Pedal Controller is programmed by sending it MIDI System Exclusive programming commands from a computer with a MIDI interface. These commands are described in detail on the following pages.

Upon receipt of a programming command, the Pedal Controller's MIDI indicator LED flashes rapidly for about one second to indicate that the setting has been stored. Settings are retained after power is removed, and the unit can then be inserted wherever it is required in your MIDI setup.

OPERATION

Ensure that the pedal is connected to the unit before power-up as it is calibrated at this time. The Pedal Controller's MIDI Indicator LED will light as soon as the sending device is turned on, and flashes whenever MIDI data passes through the unit. Moving the pedal causes the unit to send out MIDI messages according to its programmed settings.

PROGRAMMING COMMANDS

DEVICE PARAMETERS

The following Device Parameters are in effect regardless of the functions that the Pedal Controller has been programmed to perform.

Echo: When Echo is ON, all incoming MIDI messages received by the Pedal Controller are echoed to its MIDI output. When Echo is OFF, only the messages generated by the Pedal Controller are sent to its MIDI output.

Curvature Amount: Specifies how much the pedal movement differs from a linear response.

Curvature Direction: Specifies the direction of the curvature. If curvature direction is upward, the output value will rise more quickly at the bottom of the pedal range and more slowly at the top. If curvature direction is downward, the output value will rise more slowly at the bottom of the pedal range and more quickly at the top.

Neutral Range: Specifies the amount of movement at each end of the pedal for which no change occurs. Neutral Range Top specifies the neutral range at the top of the pedal movement and Neutral Range Bottom specifies the neutral range at the bottom of the pedal movement.

To set the Pedal Controller device parameters, send it the following System Exclusive programming command:

► **F0 00 00 50 16 00 aa bb cc dd ee F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

aa = Echo (**aa** = 00: Echo OFF, **aa** = 01: Echo ON)

bb = Curvature Amount (**bb** = 00: no curvature, **bb** = 7F: maximum curvature)

cc = Curvature Direction (**cc** = 00: downward, **cc** = 01: upward)

dd = Neutral Range Bottom (dd = 00: Automatic)

ee = Neutral Range Top (ee = 00: Automatic)

Example

To program the Pedal Controller to echo incoming MIDI data to its output, respond linearly to pedal movement (no curvature), and automatically determine the top and bottom position of the pedal, send it the following System Exclusive programming command:

F0 00 00 50 16 00 01 00 00 00 00 F7

MESSAGE TYPE

There are five programmable parameters that specify the type of message to be generated by the Pedal Controller. These parameters are **aa: Message Type**, **bb: Control Change# (or Sysex Byte#)**, **cc: MIDI Channel**, **dd: Maximum Value**, and **ee: Minimum Value**.

Message Type (aa) specifies the type of message to be generated. Selectable message types include Control Change, Aftertouch, Pitch Bend, and System Exclusive.

Control Change# or Sysex Byte# (bb) specifies the Control Change number if the Message Type (aa) is Control Change. If the Message Type (aa) is System Exclusive, then bb specifies the byte of the System Exclusive message that is variable, i.e. the byte that changes in response to the pedal movement.

MIDI Channel (cc) specifies the MIDI channel of the generated message. This parameter is ignored if the Message Type is System Exclusive.

Minimum Value (dd) specifies the minimum value generated by the Pedal Controller. **Maximum Value (ee)** specifies the maximum value generated. If the Minimum Value is greater than the Maximum Value, then the values will decrease as the pedal is moved upward, allowing the pedal to be used in reverse operation.

To program the Message Type to be generated by the Pedal Controller, send it the following System Exclusive programming command:

► **F0 00 00 50 16 01 aa bb cc dd ee (cc cc cc) F7**

All bytes must be in Hexadecimal format (see hexadecimal conversion table at end)

aa = Message Type (**aa** = 00: Controller, **aa** = 01: Aftertouch, **aa** = 02: Pitch Bend, **aa** = 03: System Exclusive)

bb = Control Change# (if **aa** = 00) or Sysex Byte# (if **aa** = 03)

cc = MIDI Channel (see MIDI channel table at end)

dd = Minimum Value transmitted

ee = Maximum Value transmitted

(**cc cc cc**) up to three optional additional MIDI channels

Example

To program the Pedal Controller to generate the System Exclusive message F0 22 33 44 55 F7, varying the fourth byte, with a minimum value of 9, and a maximum value of 127 (=7F Hex), send it the following System Exclusive programming commands:

F0 00 00 50 16 01 **03 04 00 09 7F** F7 followed by **F0 22 33 44 55 F7**

DUMP SETTINGS

To dump the Pedal Controller current settings, send it the following System Exclusive message:

► **F0 00 00 50 16 10 F7**

Upon receipt of this command the Pedal Controller will dump its current settings to the MIDI Out.

MIDI CHANNEL TABLE

The value **cc** in the programming commands is assigned according to the following table:

MIDI Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
cc	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F

MIDI CONTROL CHANGE TABLE

Decimal	Hexadecimal	Control Function
0	00	Bank Select
1	01	Modulation wheel or lever
2	02	Breath Controller
3	03	Undefined
4	04	Foot controller
5	05	Portamento time
6	06	Data entry MSB
7	07	Channel Volume
8	08	Balance
9	09	Undefined
10	0A	Pan
11	0B	Expression Controller
12-13	0C-0D	Effect Controls 1-2
14-15	0E-0F	Undefined
16-19	10-13	General Purpose Controllers (#'s 1-4)
20-31	14-1F	Undefined
32-63	20-3F	LSB values for 0-31
64	40	Damper pedal (sustain)
65	41	Portamento On/Off
66	42	Sostenuto
67	43	Soft pedal
68	44	Legato Fsw (vv=00-3F: Normal, 40-7F: Legato)
69	45	Hold 2
70	46	Sound Controller 1 (default: Sound Variation)
71	47	Sound Controller 2 (default: Timbre/Harmonic Content)
72	48	Sound Controller 3 (default: Release Time)
73	49	Sound Controller 4 (default: Attack Time)
74	4A	Sound Controller 5 (default: Brightness)
75-79	4B-4F	Sound Controllers 6-10 (no defaults)
80-83	50-53	General Purpose Controllers (#'s 5-8)
84	54	Portamento Control
85-90	55-5A	Undefined
91	5B	Effects 1 Depth (formerly External Effects Depth)
92	5C	Effects 2 Depth (formerly Tremolo Depth)
93	5D	Effects 3 Depth (formerly Chorus Depth)
94	5E	Effects 4 Depth (formerly Celeste (Detune) Depth)
95	5F	Effects 5 Depth (formerly Phaser Depth)
96,97	60,61	Data increment, Data decrement
98,99	62,63	Non-Registered Parameter Number LSB, MSB
100,101	64,65	Registered Parameter Number LSB, MSB
102-119	66-77	Undefined
120-127	78-7F	Reserved for Channel Mode Messages

HEXADECIMAL CONVERSION TABLE

Dec/Hex	16	10	32	20	48	30	64	40	80	50	96	60	112	70
0 00	16	10	32	20	48	30	64	40	80	50	96	60	112	70
1 01	17	11	33	21	49	31	65	41	81	51	97	61	113	71
2 02	18	12	34	22	50	32	66	42	82	52	98	62	114	72
3 03	19	13	35	23	51	33	67	43	83	53	99	63	115	73
4 04	20	14	36	24	52	34	68	44	84	54	100	64	116	74
5 05	21	15	37	25	53	35	69	45	85	55	101	65	117	75
6 06	22	16	38	26	54	36	70	46	86	56	102	66	118	76
7 07	23	17	39	27	55	37	71	47	87	57	103	67	119	77
8 08	24	18	40	28	56	38	72	48	88	58	104	68	120	78
9 09	25	19	41	29	57	39	73	49	89	59	105	69	121	79
10 0A	26	1A	42	2A	58	3A	74	4A	90	5A	106	6A	122	7A
11 0B	27	1B	43	2B	59	3B	75	4B	91	5B	107	6B	123	7B
12 0C	28	1C	44	2C	60	3C	76	4C	92	5C	108	6C	124	7C
13 0D	29	1D	45	2D	61	3D	77	4D	93	5D	109	6D	125	7D
14 0E	30	1E	46	2E	62	3E	78	4E	94	5E	110	6E	126	7E
15 0F	31	1F	47	2F	63	3F	79	4F	95	5F	111	6F	127	7F

WARRANTY

MIDI Solutions Inc. warrants this product to be free from defects in material and workmanship for a period of one (1) year from date of purchase. This warranty is void if the product has been damaged by accident, misuse, alteration, unauthorized repairs or other causes not arising out of defects in material or workmanship. Under no circumstances will MIDI Solutions be liable for any loss of profits, benefits, time, interrupted operation, commercial loss, or consequential damages arising out of the use or inability to use the product. MIDI Solutions specifically disclaims any implied warranties of merchantability and fitness for a particular purpose. If the product requires service, a Return Merchandise Authorization (RMA) number must be obtained from MIDI Solutions and the product must be shipped prepaid to a specified Service Center. MIDI Solutions will repair or replace the product at our discretion and will pay return shipping fees. The customer is responsible for any damage or loss sustained during shipment in any direction.